 


## Life Cycle LC9100 - LC91-0100-10

### General Assembly

---

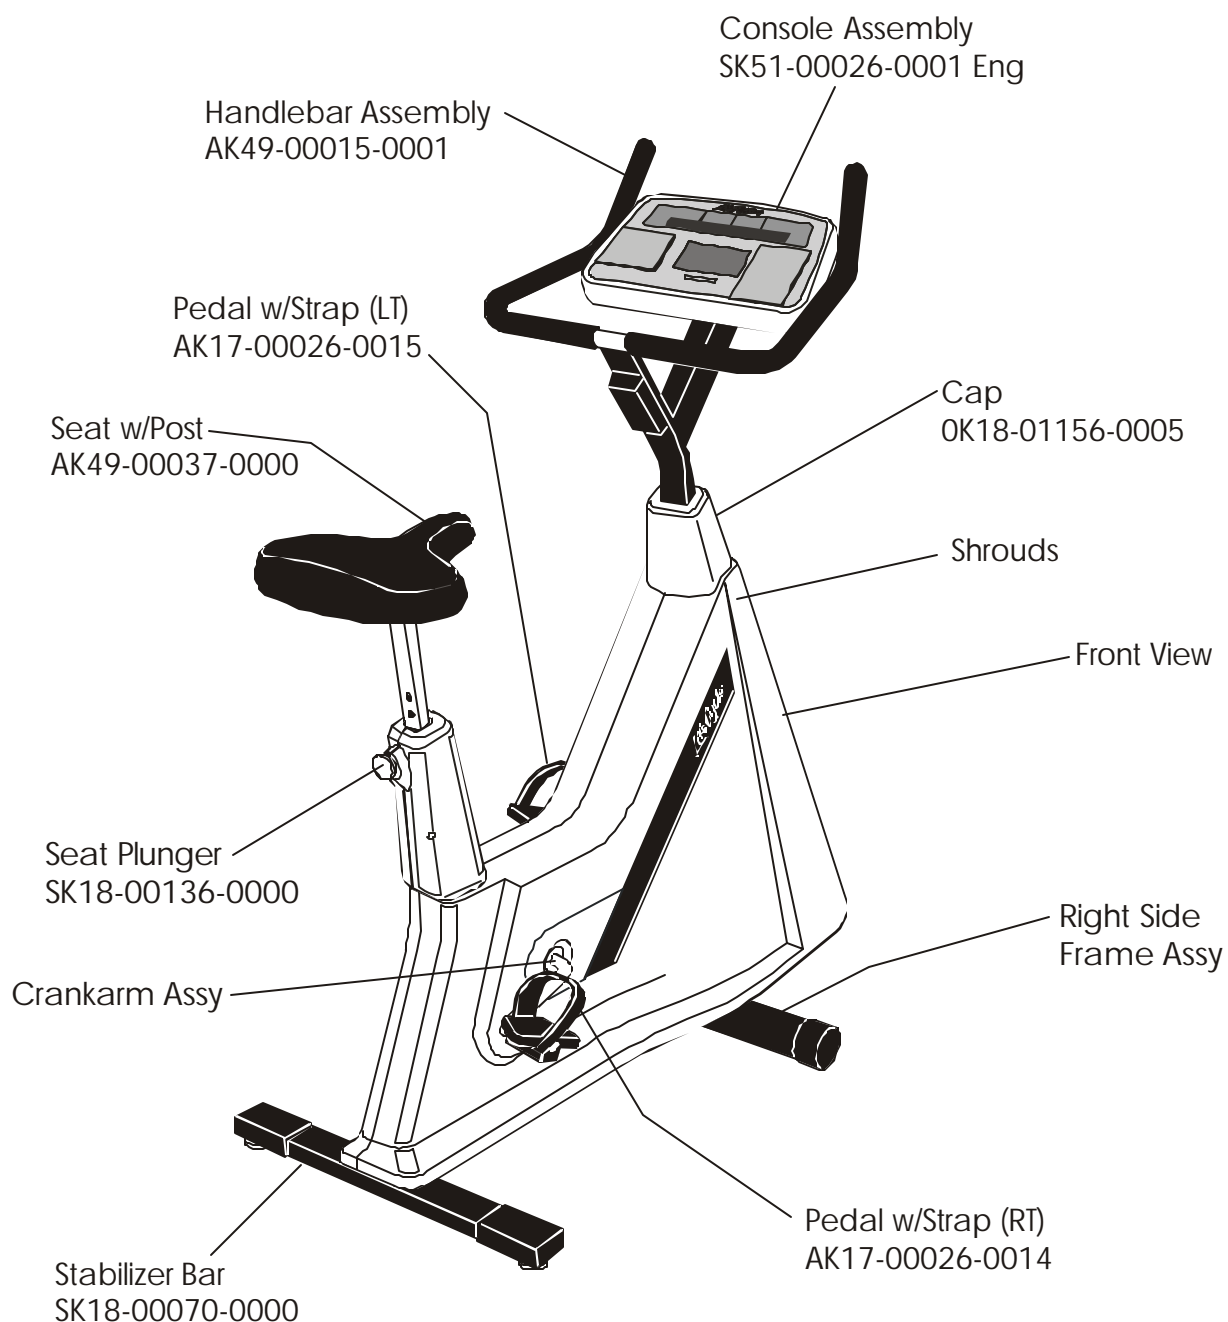 


NOTE: Installation Instructions MO51-00K49-A006,  
Operator Manual M051-00K20-B106  
Service Manual M051-00K49-A012  
Install Hardware AK49-00025-0000

## Life Cycle LC9100 - LC91-0100-10

### Right Side Frame


---

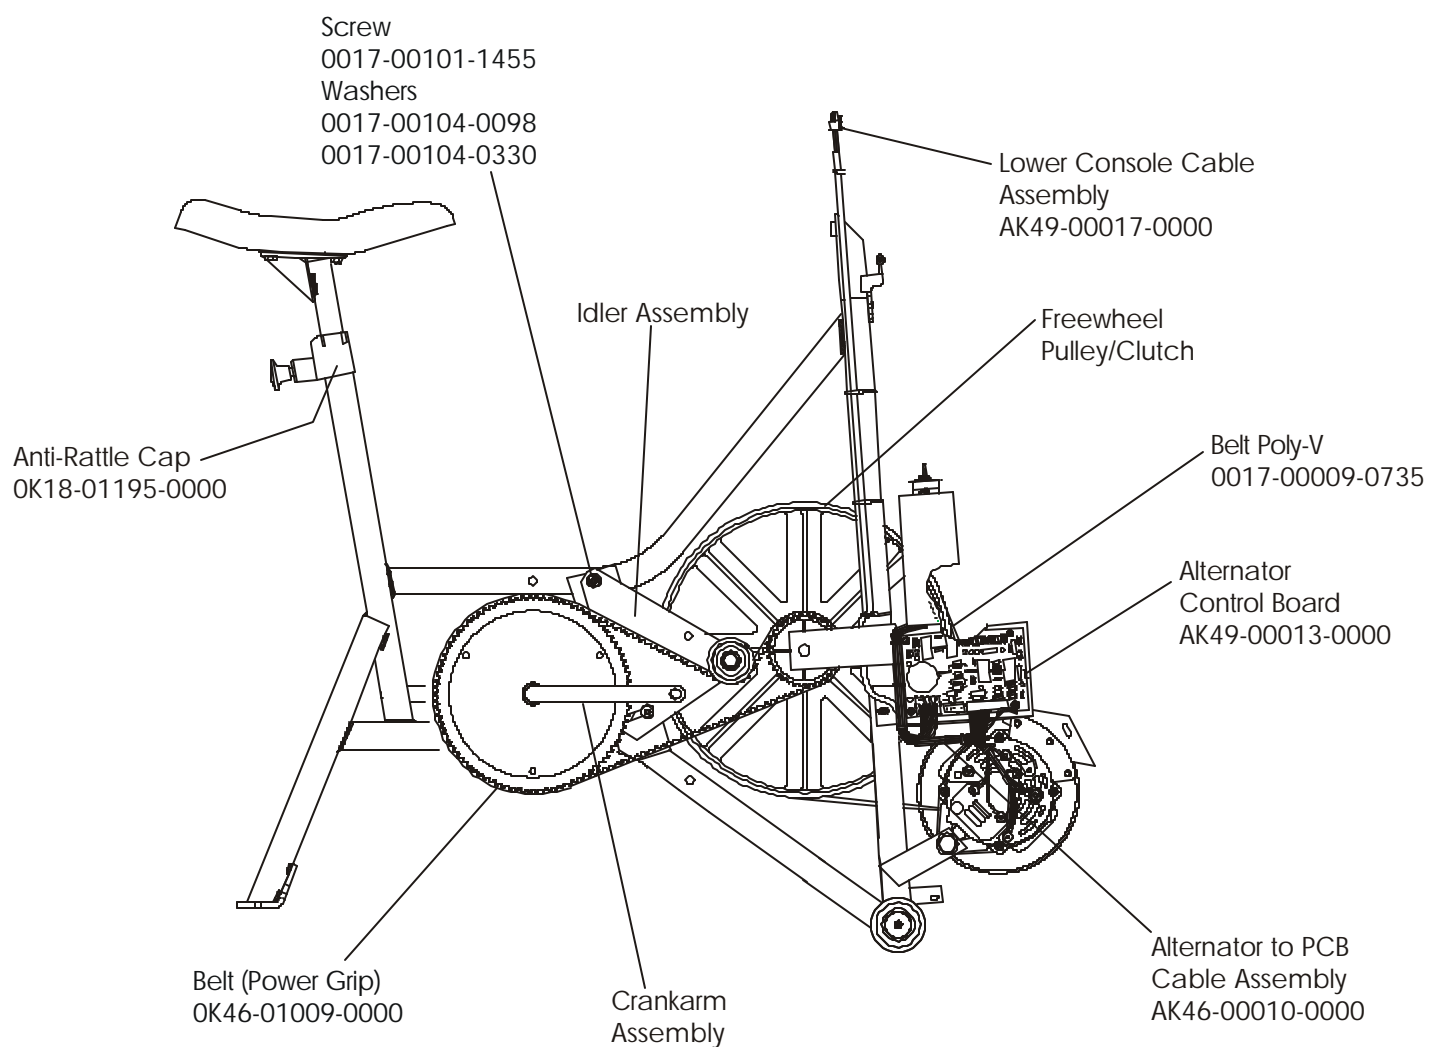

## Life Cycle LC9100 - LC91-0100-10

### Shrouds and Side Covers

 
---

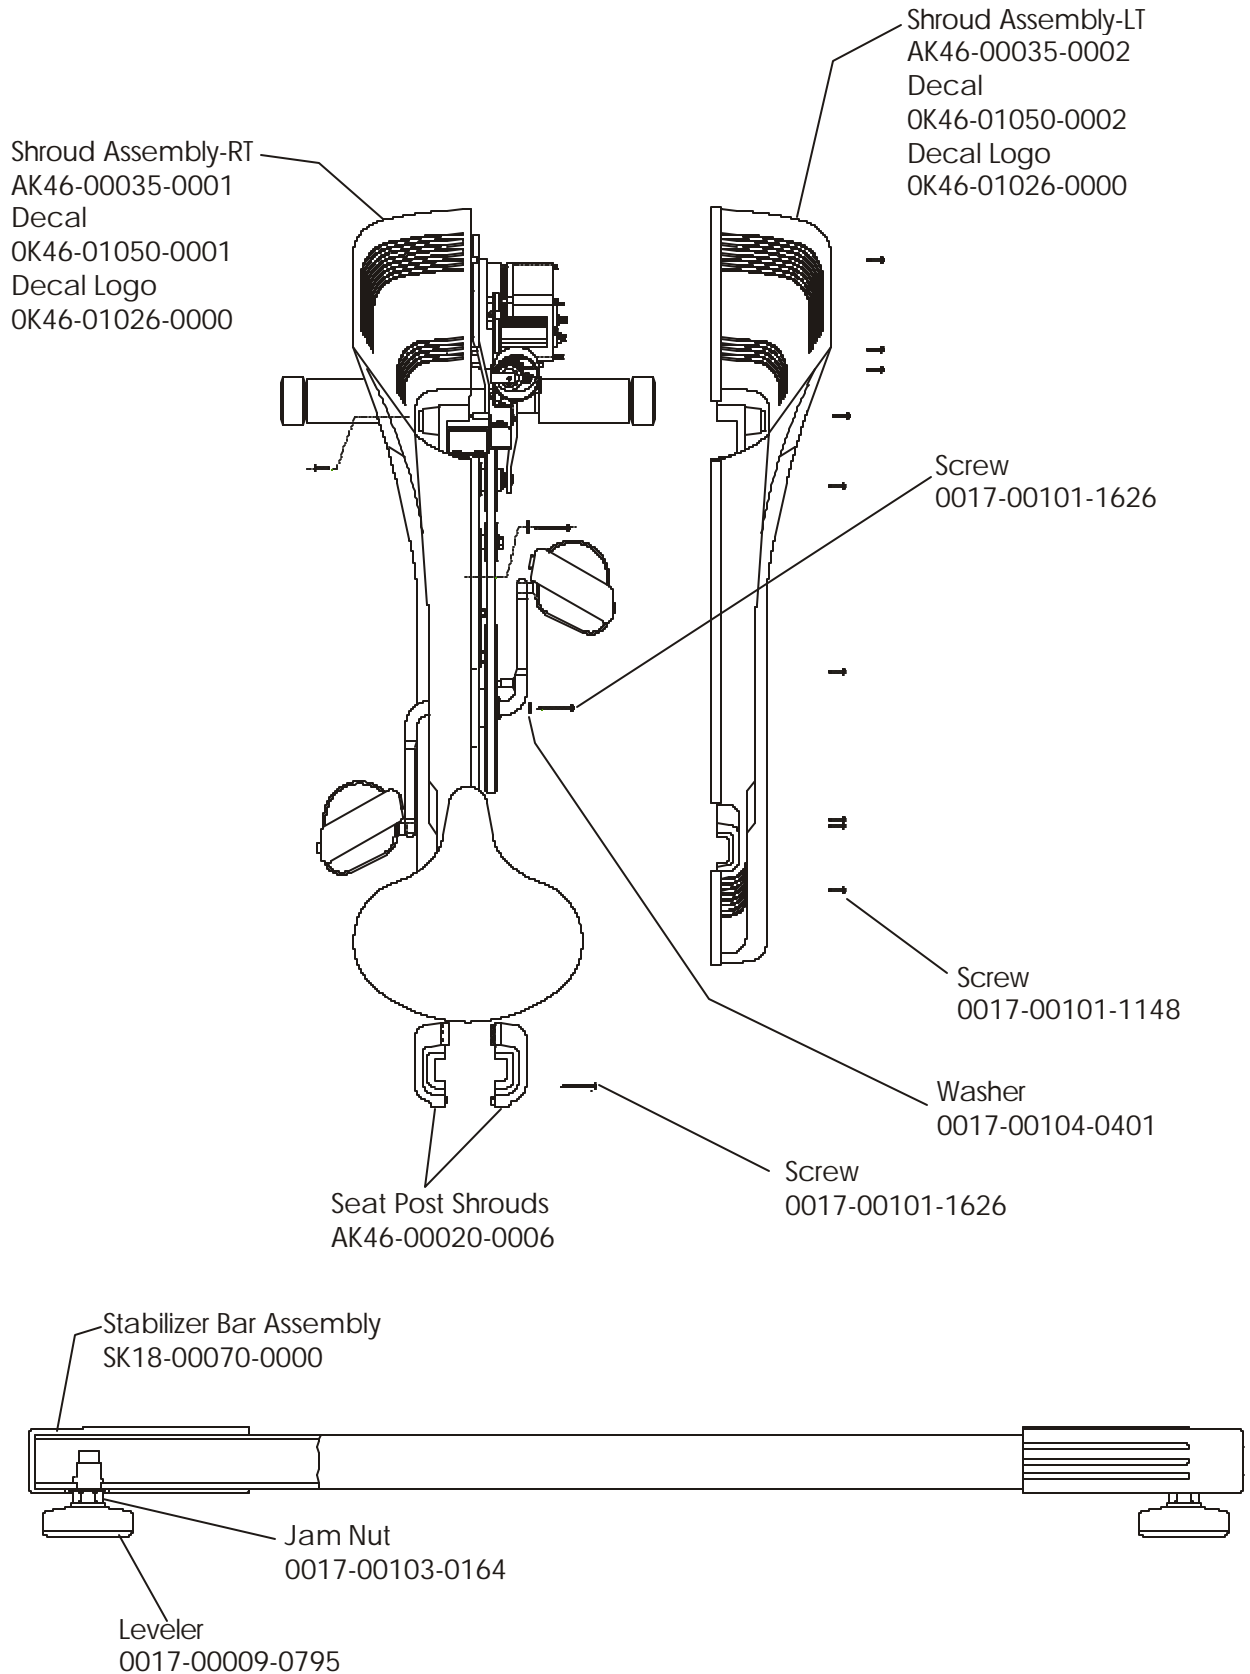

# Life Cycle LC9100 - LC91-0100-10

## Front View

 ---

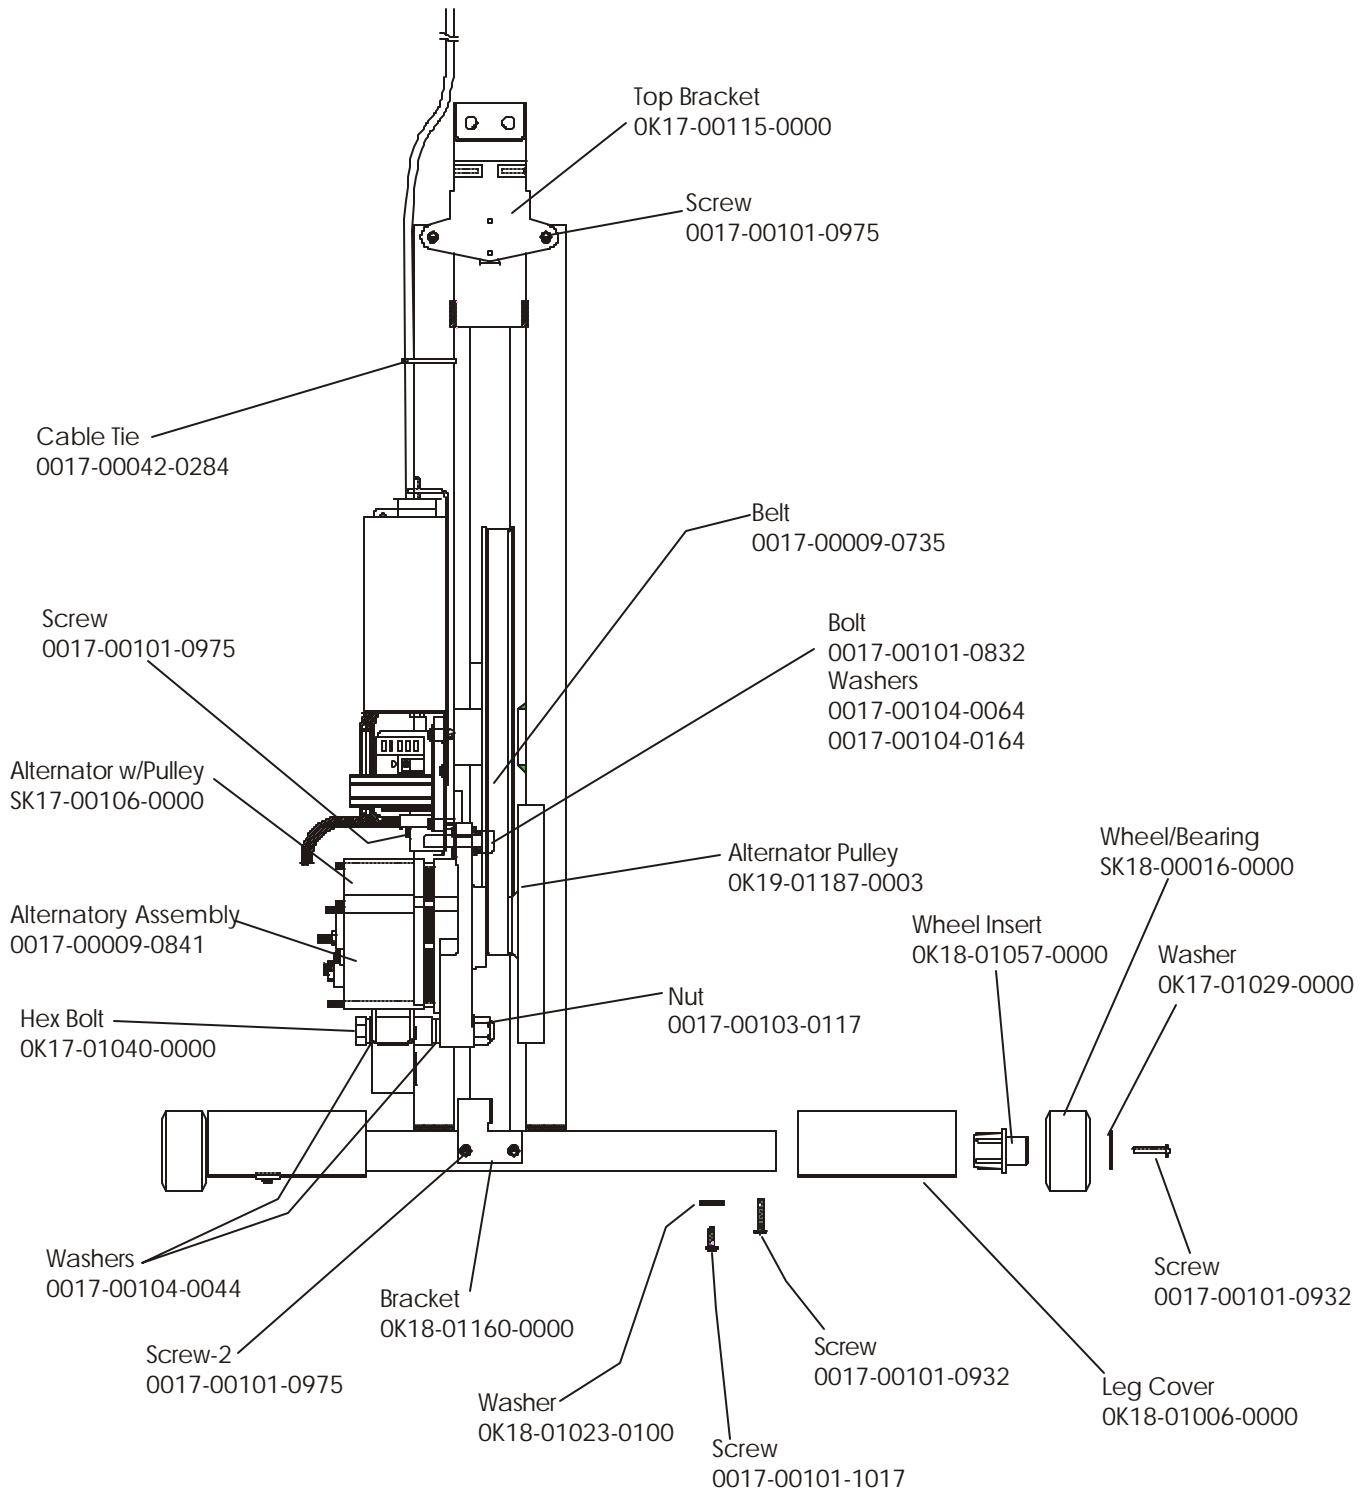

# Life Cycle LC9100 - LC91-0100-10

## Console Assembly

---


### Console Assembly

SK51-00026-0001 Eng/Met  
 AK51-00026-0003 Ger/Eur  
 AK51-00026-0004 Spn/Eur  
 AK51-00026-0006 Eng  
 AK51-00026-0007 Frn/Eur  
 AK51-00026-0008 Itl/Eur  
 AK51-00026-0009 Dut/Eur

Screw  
 0017-0010-1250

### Overlay Bezel

 AK49-00038-0001 Eng/Met  
 AK49-00038-0003 Ger/Eur  
 AK49-00038-0004 Spn/Eur  
 AK49-00038-0006 Eng  
 AK49-00038-0007 Frn/Eur  
 AK49-00038-0008 Itl/Eur  
 AK49-00038-0009 Dut/Eur

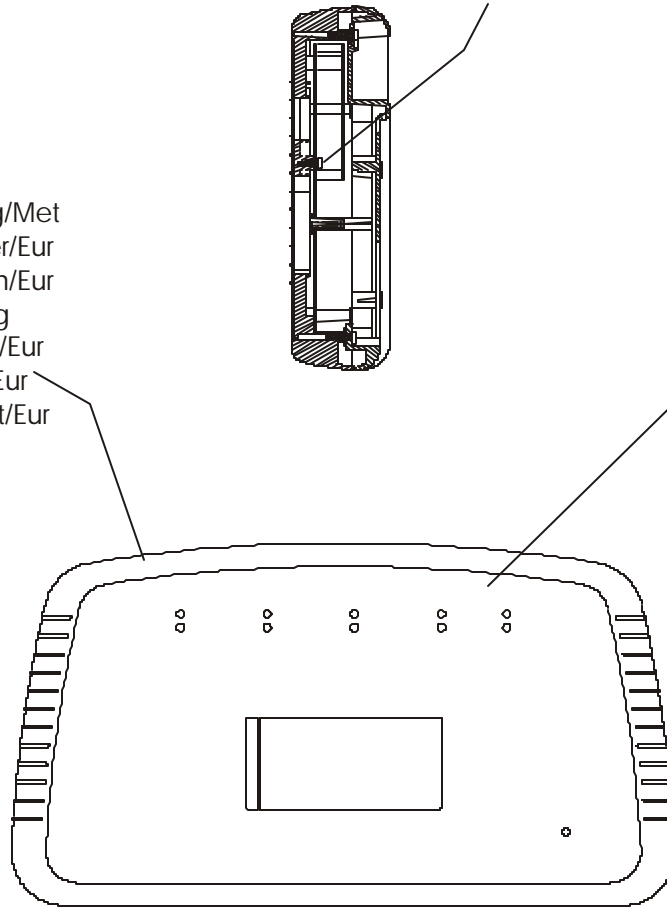


Console Case (Grey)  
 OK36-01187-0006

Battery Cover  
 OK36-01035-0006

Screw  
 0017-00101-1104

 
SCREW-6  
 0017-00101-0823

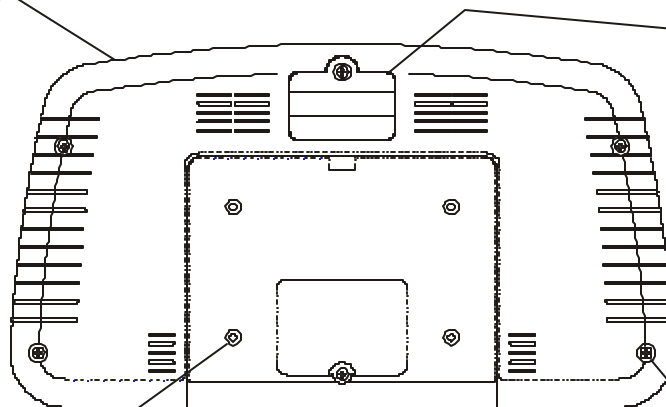

## ***Life Cycle LC9100 - LC91-0100-10***

### **Handlebar Assembly - AK49-00015-0001**

 
---

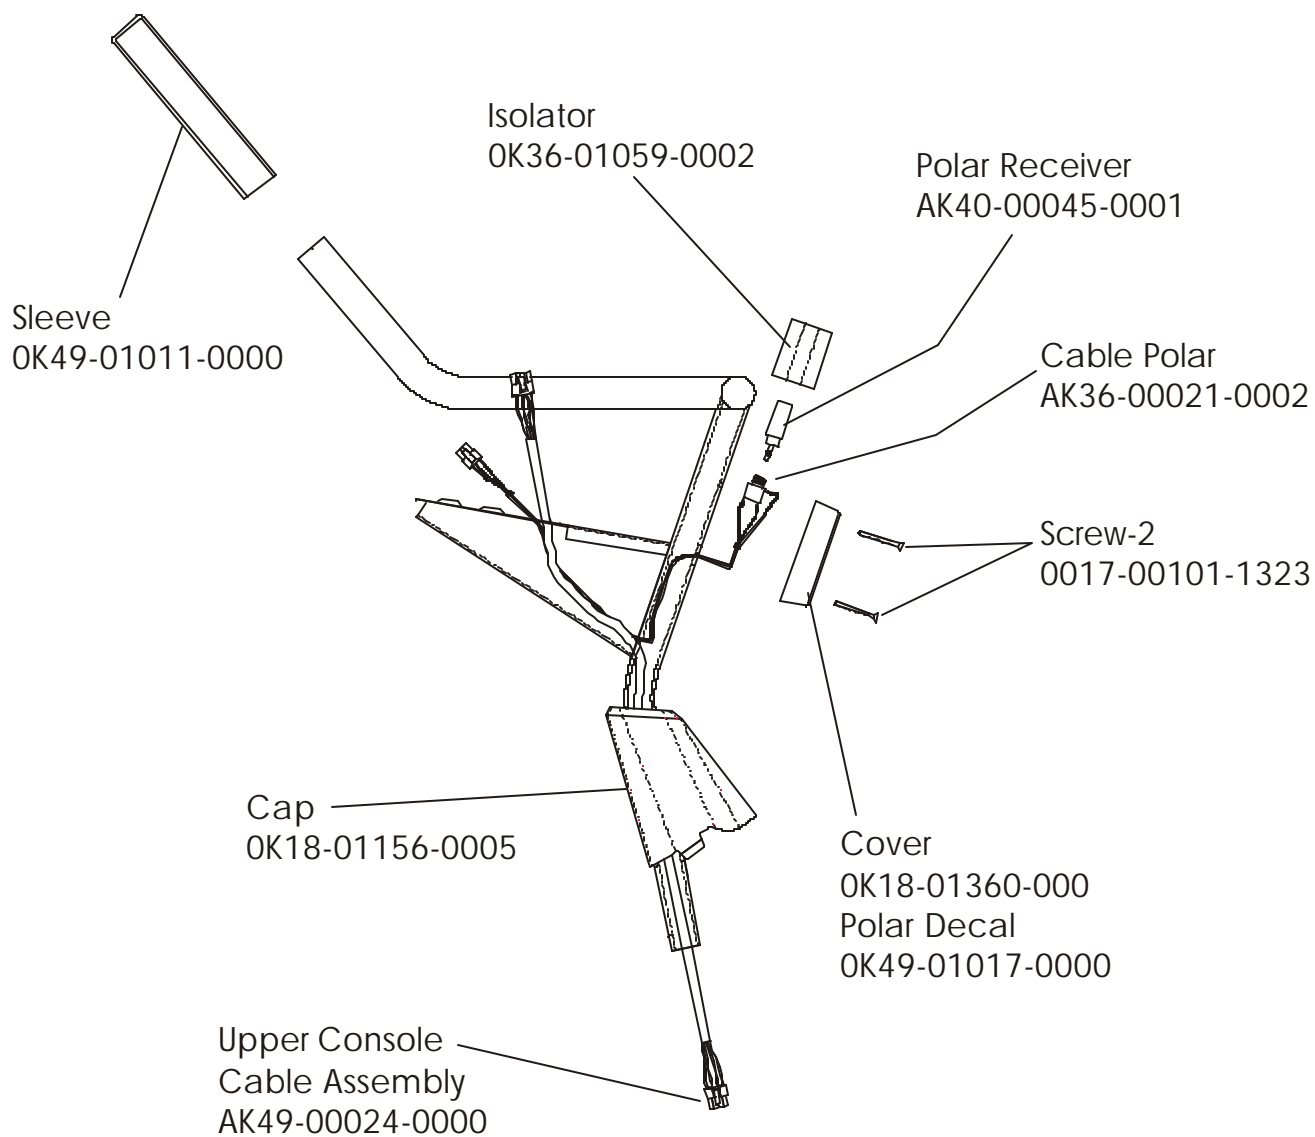

## Life Cycle LC9100 - LC91-0100-10

### Crankarm Assembly

 ---

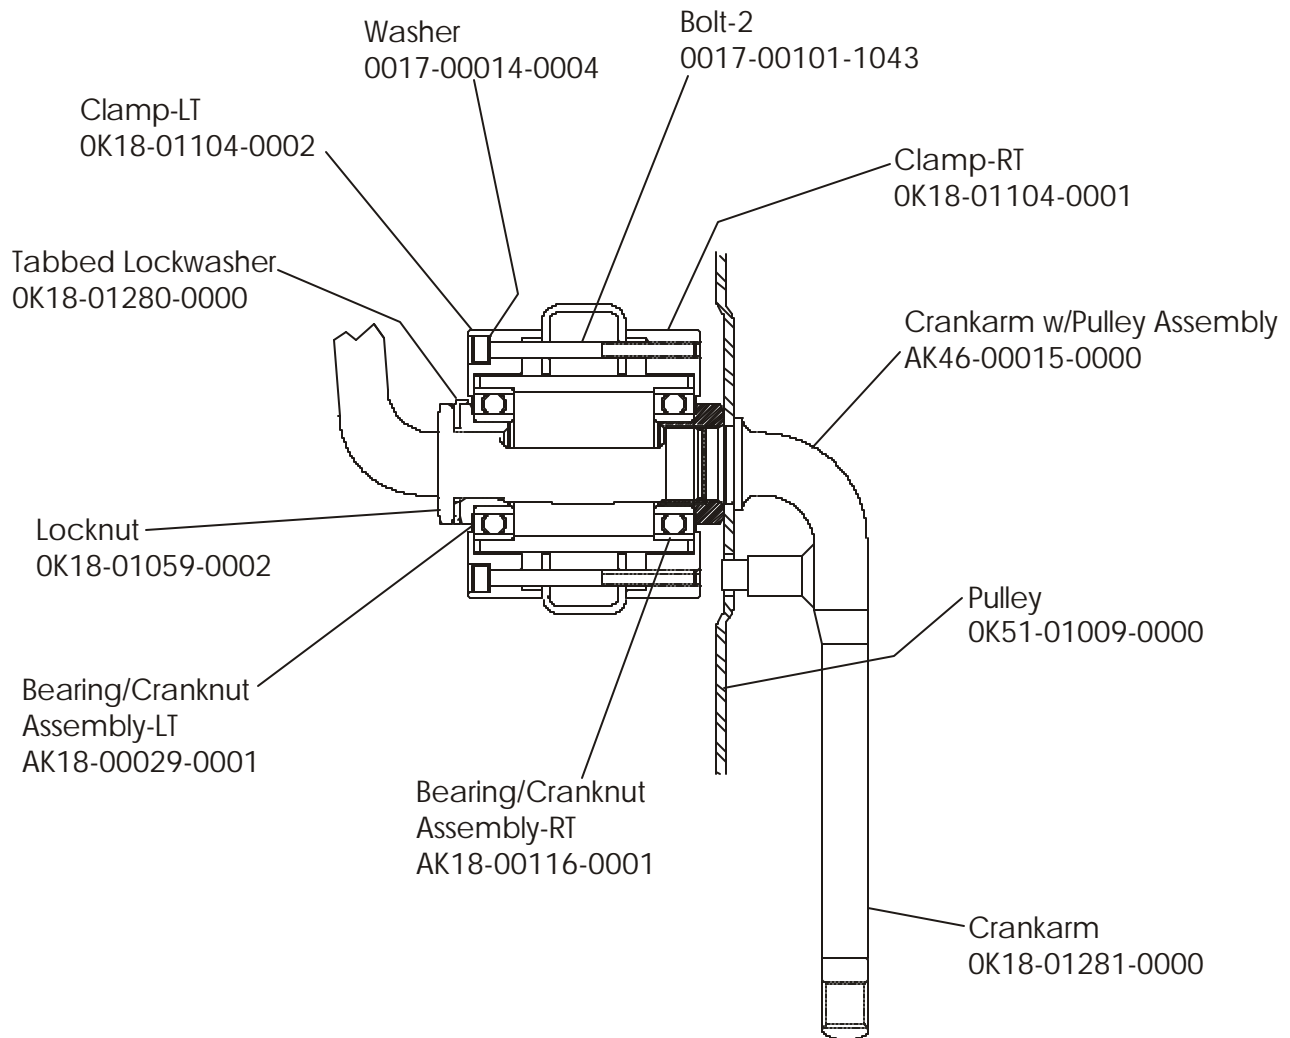


**NOTE: For complete Crankarm Bearing Kit order GK18-00004-0023**

## Life Cycle LC9100 - LC91-0100-10

### Freewheel Pulley/Clutch Assembly

 
---

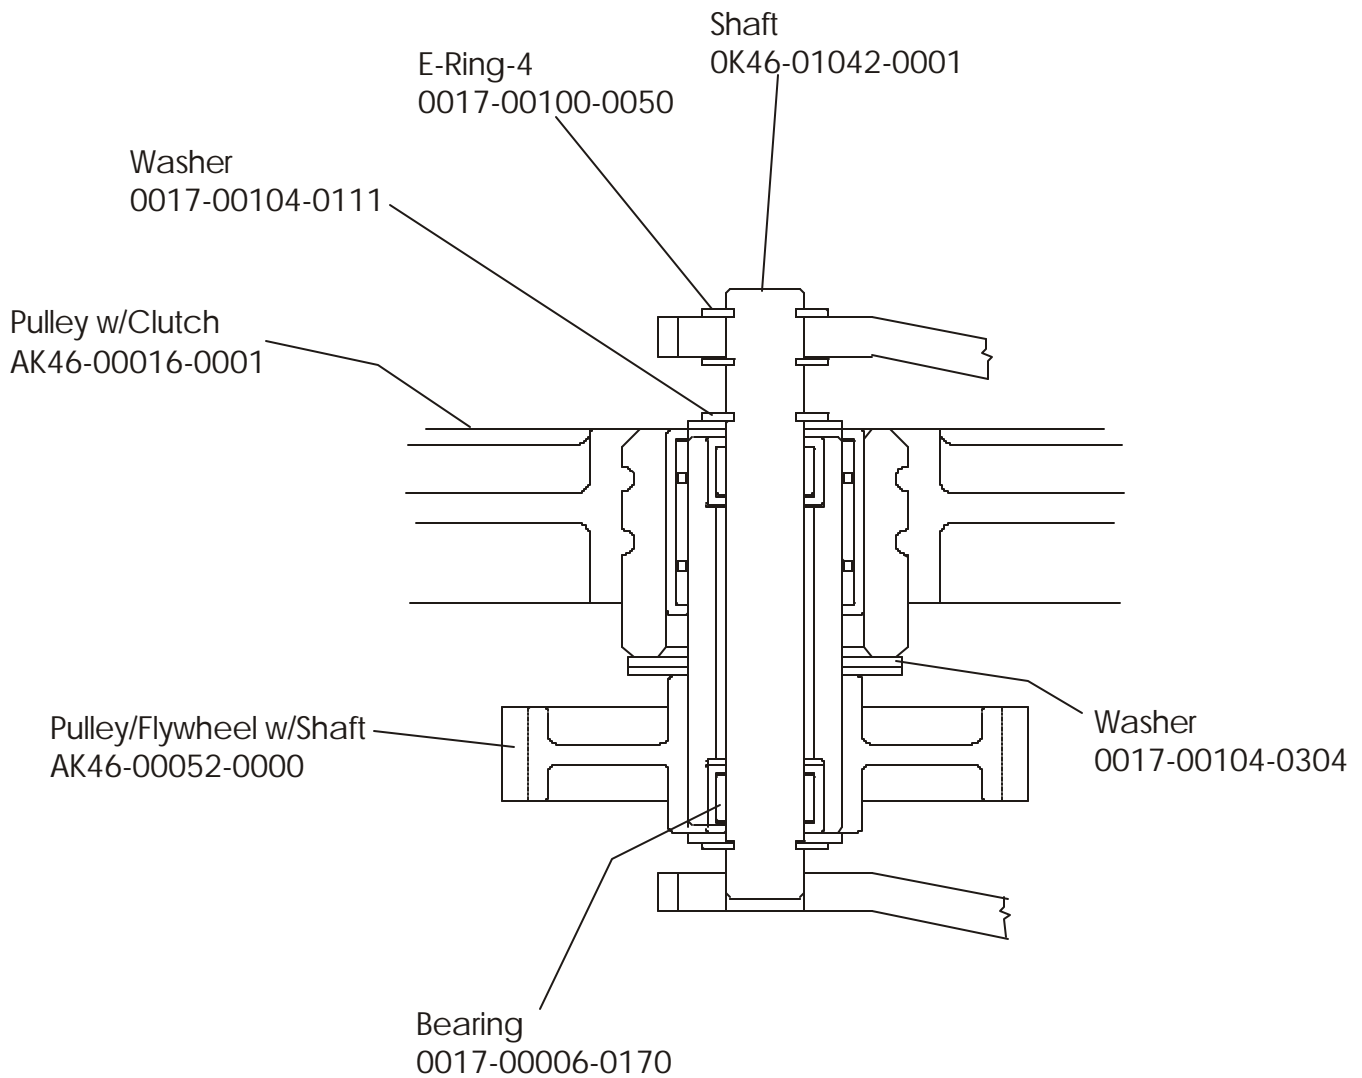




**Life Cycle LC9100 - LC91-0100-10**  
**Idler Arm Assembly**

 ---

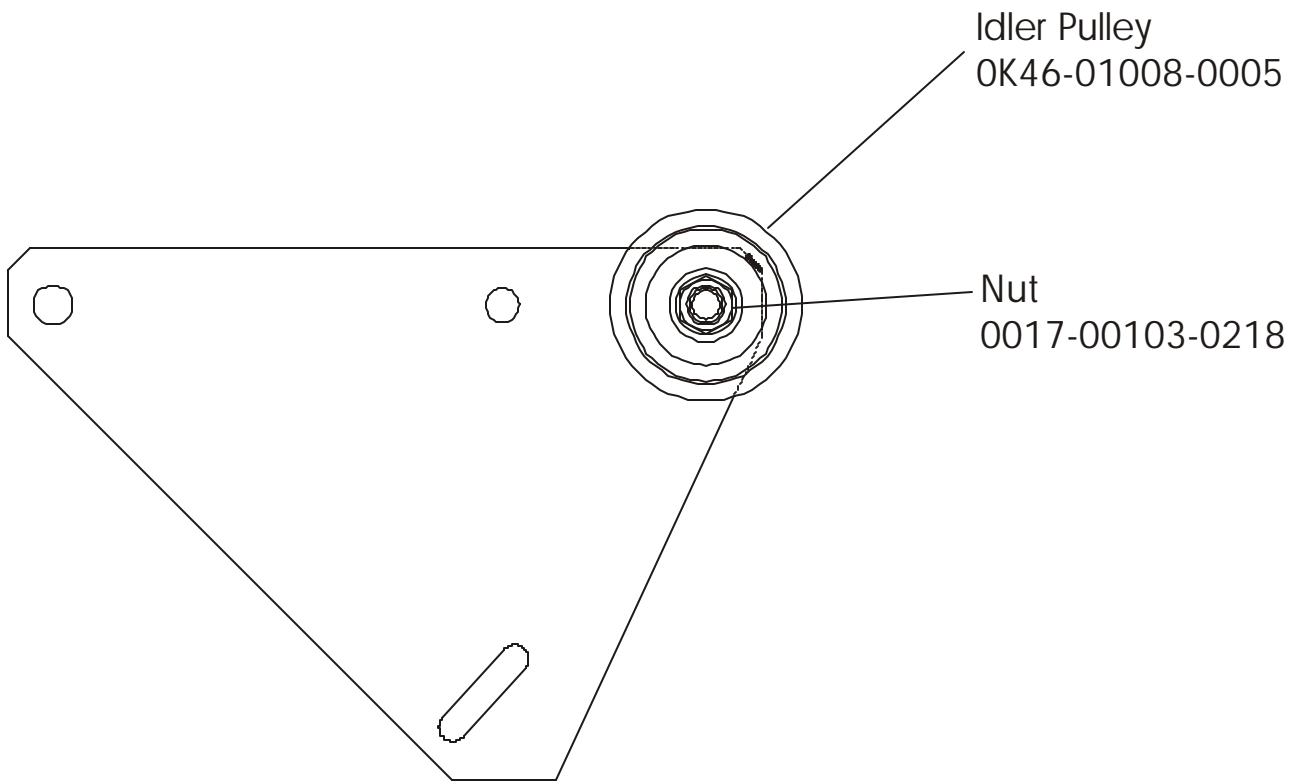


**Life Cycle LC9100 - LC91-0100-10**  
**Seat/Seat Post Assembly - AK49-00037-0000**

 ---

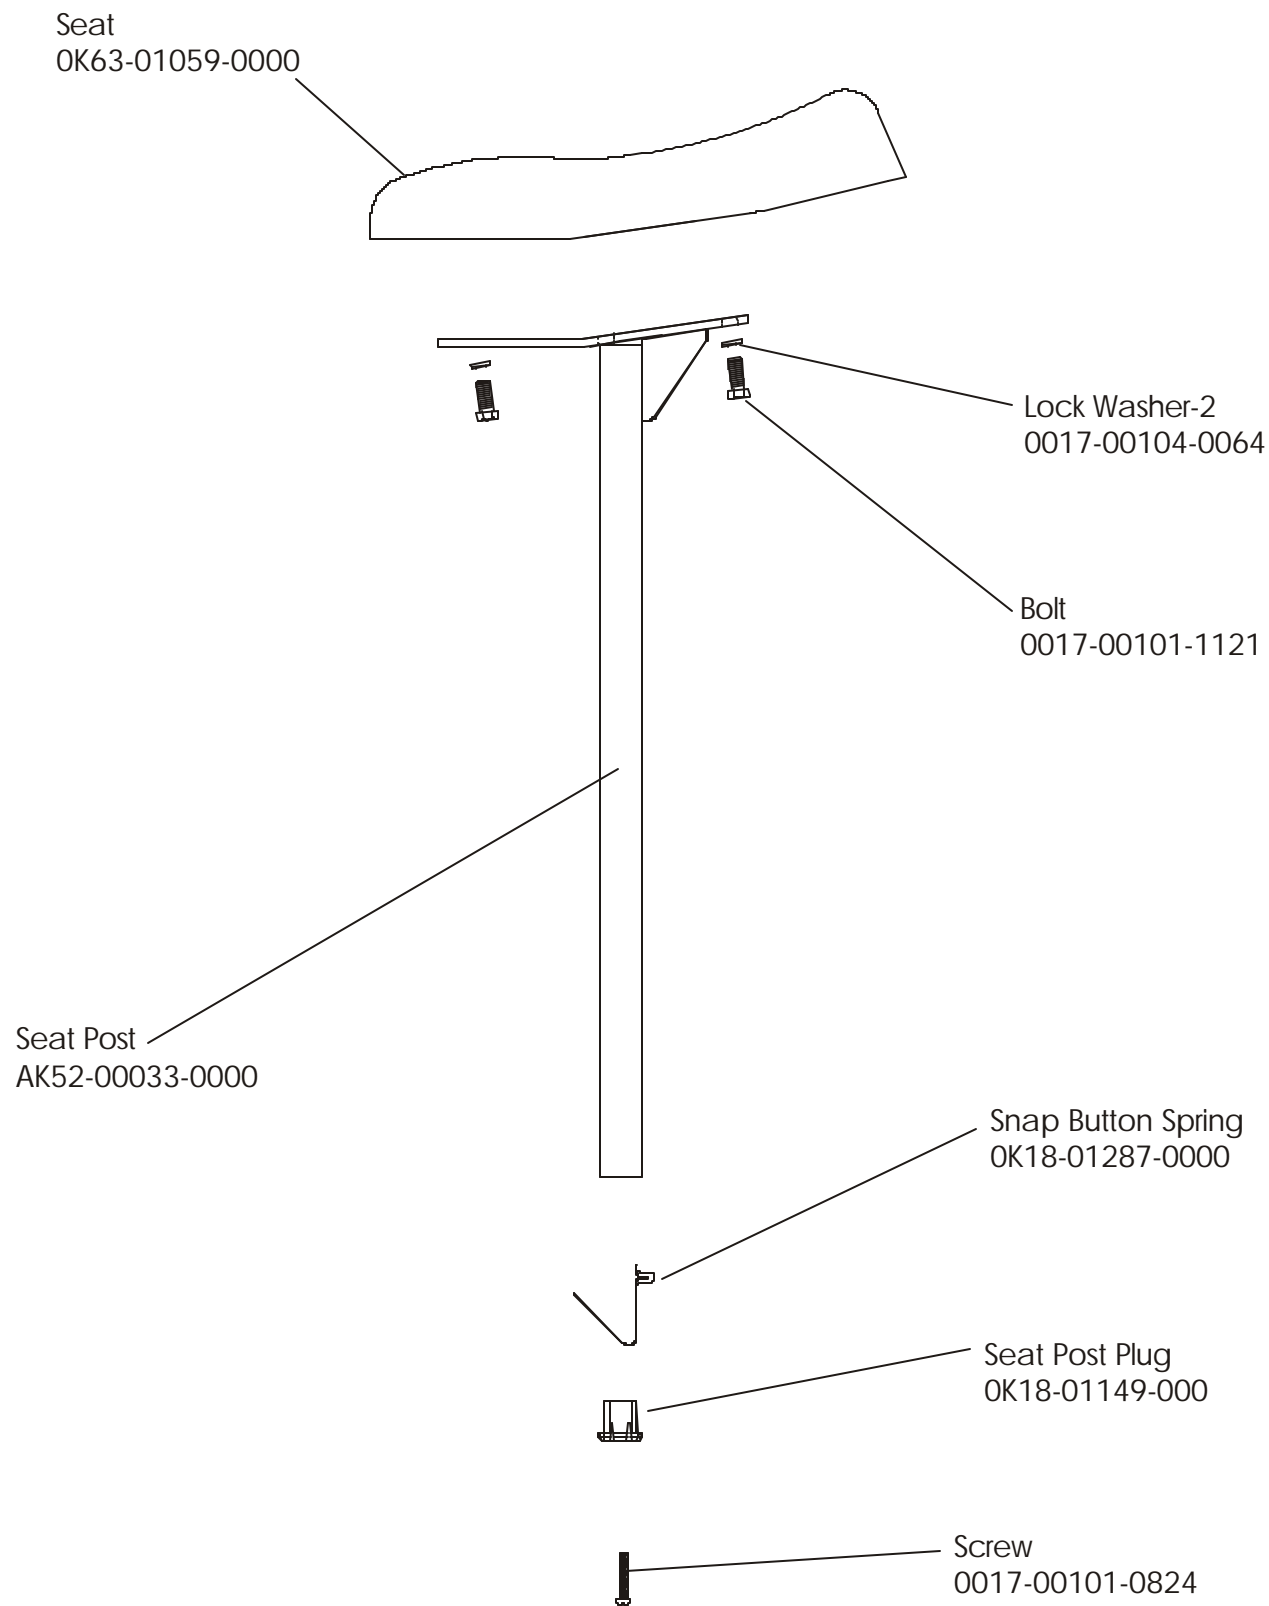

**Life Cycle LC9100 - LC91-0100-10**  
**Seat Plunger Assembly - SK18-00136-0000**

 ---

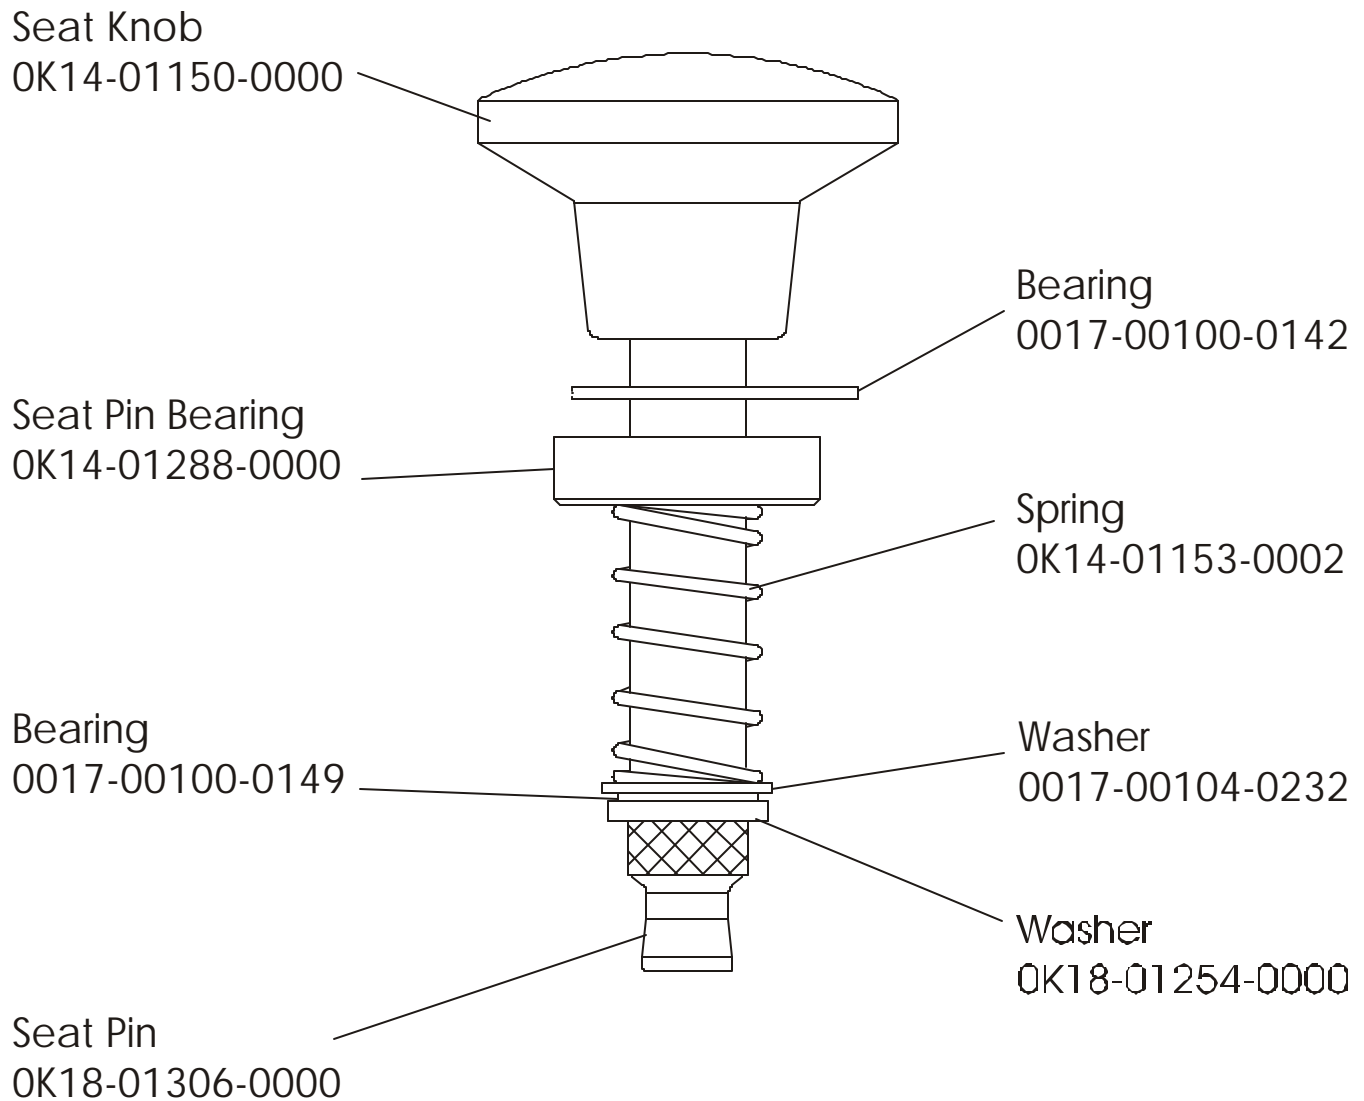

**Life Cycle LC9100 - LC91-0100-10**  
**Alternator Control Board - AK49-00013-0000**

---

